

## SETTINGS MENU.

Comtrade → Settings menu



This menu is used to make global changes on the Comtrade page and has following options:

Option **Base channel** angle allows you to rotate the base channel on a vector diagram. By default the base channel is positioned with 90 degrees angle.

Option **Main window width** allows you to manually resize the main window.

Option **Vector diagram** width allows you to manually resize the vector diagram and protection windows.

Option **Line width, px** allows you to change the thickness of the waveform line of the analog channels.



Option **File encoder** allows you to change file encoder from Windows to DOS encoding. This can be useful if you have to deal with old recorders.